


MONO PITCH CANOPY FASTENING

Overdoor Mono top canopies are normally fastened to the wall by fastening through the GRP flange, using 65mm 10gauge (preferably stainless steel) screws at 300mm centres into suitable wall plugs and should then be finished with a lead flashing

NOT TO SCALE

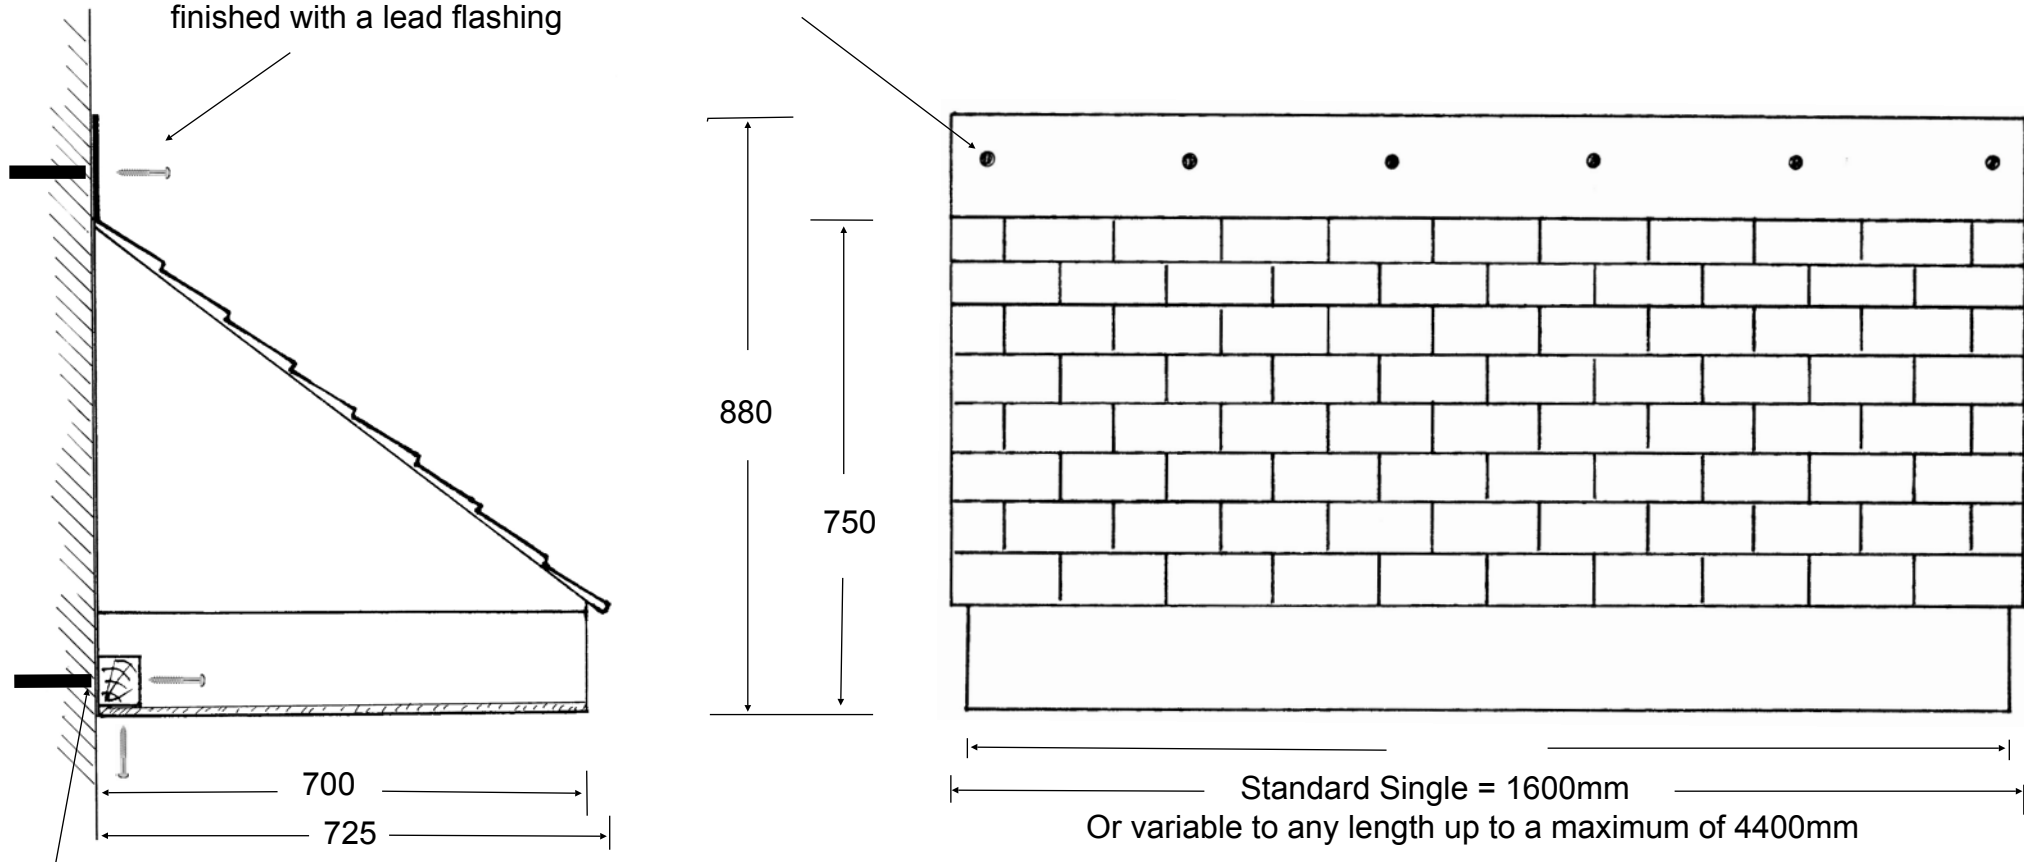

Further fastening can be provided by a timber baton being fastened to the wall above the doorway, into which the base of the canopy can be fastened.

If further support is required, gallows brackets can also be fitted to the underside of the canopy. (For fastening of gallows brackets, see Gallows Bracket Fastening drawing)

Note: All fastening should be done prior to the fitting of flashing

Safety Notice:

GRP Canopies are both functional and decorative, but they are NOT designed to be stood upon in any circumstance!

Man Friday (South West) Ltd

5 Marsh End, Lords Meadow,
Crediton, Devon, EX17 1DN

E-mail: info@manfriday.co.uk

Web: www.manfriday.co.uk

Tel 01363 776622